

BEYOND | 2-hole basin mixer for concealed installation

Finish: polished chrome / brushed (CRCB)

Designed by Maja Ganszyniec, BEYOND is part of the OMNIRES Signature Collection – a portfolio representing the fullest expression of the brand's design ambitions. Its distinctive form draws on modernism, combining clarity of geometry with subtle understated curves. The slender spout and the slim, round knob with its rosette-free design create a restrained composition founded on proportion and balance. The cascading stream, reminiscent of a natural waterfall, gently envelops the skin and brings a sensual dimension to everyday rituals.

Concealed installation brings the carefully designed exposed elements to the fore, emphasising the purity of form and coherence of the overall composition. The built-in part protects the internal components during finishing work and facilitates precise positioning of the visible mixer elements. Made from high-grade brass and fitted with a high-quality progressive cartridge, the mixer allows water flow and temperature to be controlled with a single movement. A gradual turn of the knob provides smooth adjustment of the flow rate and water temperature – from a cool, gentle flow to a full stream of warm water. The ribbed finish of the knob and an aerator that creates a soft, air-enriched stream enhance everyday comfort. The aerator also reduces water flow, supporting the responsible use of resources.

Chrome is a versatile silver finish. The distinctive combination of polished and brushed textures across different surfaces creates a subtle play of shifting light reflections, highlighting the depth of the finish and the precision of every detail.

Design: Maja Ganszyniec, Maja Ganszyniec Studio
Awards: Red Dot Design Award 2025

Certificates: Polish Declaration of Performance (B marking), Polish Hygienic Certificate PZH



Technologies



Premium-quality progressive cartridge offers smooth control over both water flow and temperature, enabling a seamless transition from minimum to maximum flow. The progressive operation allows the water settings to be adjusted gradually, ensuring comfort in everyday use, while the default cold-water start supports greater energy efficiency.



Thanks to the AIR WATER technology, the water is soft and pleasant to the touch. The stream does not spray and it is quiet and consistent.



The mixer's body, the valve and the rosette are all made of high quality A-grade brass.



The ECO WATER technology minimizes environmental footprint by reducing the water consumption by approx. 50%, without compromising on the overall product experience.



The product's coating, made using advanced galvanization technology, is durable and easy to clean.

Flow characteristics

- working pressure 1-5 bar
- water flow at 3 bar: 5.62 l/min

Specification

- rosette dimensions: ø5.1 cm (spout), ø6 cm (control knob)
- spout reach from tiled surface: 18.6 cm
- minimum wall depth: 8 cm
- progressive ceramic cartridge: ø28 mm
- built-in parts included

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

WHAT IS THE BEST METHOD FOR CLEANING THE AERATOR?

Remember to regularly control the flow of water through the aerator so as to ensure its problem-free operation and protect it from damage. In the case of small contaminants in the water or "hard" water, remove the aerator once every few weeks and clean it with a brush. In the case of more stubborn dirt, we recommend soaking the aerator for 10 minutes in a 10% citric acid solution with water.

