

BEYOND | 4-hole thermostatic bath mixer for concealed installation with floor-standing bath spout

Finish: polished chrome / brushed (CRCB)

Designed by Maja Ganszyniec, BEYOND is part of the OMNIRES Signature Collection – a portfolio representing the fullest expression of the brand's design ambitions. Its distinctive form draws on modernism, combining clarity of geometry with subtle understated curves. The freestanding spout, the round knobs, and the hand shower set on a minimalist and slim rosette create a harmonious composition founded on proportion and balance. The cascading stream, reminiscent of a natural waterfall, gently envelops the skin and brings a sensual dimension to everyday rituals.

Concealed installation brings the carefully designed exposed elements to the fore, emphasising the purity of form and coherence of the overall composition. The built-in part protects the internal components during finishing work and facilitates precise positioning of the visible mixer elements. Made from high-grade brass and fitted with a high-quality thermostatic cartridge, the mixer combines durability with reliable performance. Two independent knobs allow the bath spout and hand shower to be operated separately, while also enabling both functions to be used simultaneously. The aerator in the bath spout creates a soft, air-enriched stream that feels gentle to the touch, while the flow regulator in the hand shower reduces water consumption, supporting the responsible use of resources.

Chrome is a versatile silver finish. The distinctive combination of polished and brushed textures across different surfaces creates a subtle play of shifting light reflections, highlighting the depth of the finish and the precision of every detail.

Design: Maja Ganszyniec, Maja Ganszyniec Studio
Awards: Red Dot Design Award 2025

Certificates: Polish Declaration of Performance (B marking), Polish Hygienic Certificate PZH



Technologies



The mixer is equipped with the highest quality thermostatic cartridge incorporating a 38°C lock. The cartridge protects against sudden temperature changes and guarantees long term product performance.



The EASY CLEAN nozzles allow the user to easily remove any limescale from the hand shower by simply wiping their silicone surface.



The mixer's body, the valve and the rosette are all made of high quality A-grade brass.



Thanks to the AIR WATER technology, the water is soft and pleasant to the touch. The stream does not spray and it is quiet and consistent.



The product's coating, made using advanced galvanization technology, is durable and easy to clean.

Flow characteristics

- working pressure 1-5 bar
- water flow at 3 bar: 21,30 / 9,04 l/min
- Acoustic group: U/U
- Klasa przepływu: A/A

Specification

- spout reach: 22.8 cm
- maximum water outflow height: 70.5 cm
- spout rosette dimensions: ø8.5 cm
- spout minimum wall depth: 5.2 cm
- mixer rosette dimensions: 41.3 x 6 cm
- mixer minimum wall depth: 10.9 cm
- two 3/4" inlets (hot and cold water)
- brass hand shower, 1-function
- brass flexible shower hose, length: 120 cm
- built-in parts included

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

WHAT IS THE BEST METHOD FOR CLEANING THE AERATOR?

Remember to regularly control the flow of water through the aerator so as to ensure its problem-free operation and protect it from damage. In the case of small contaminants in the water or "hard" water, remove the aerator once every few weeks and clean it with a brush. In the case of more stubborn dirt, we recommend soaking the aerator for 10 minutes in a 10% citric acid solution with water.

HOW TO KEEP THERMOSTATIC MIXERS IN OPTIMAL CONDITION?

For the thermostatic mixer to operate correctly, run the mixer once every two weeks, spanning the full temperature range – from very cold water to the maximum hot water setting. Repeat the operation several times.

WHAT IS THE BEST WAY TO CARE FOR A HAND SHOWER ?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. A toothpick or toothbrush can also be used to clean the spaces in between if there is a considerable build-up of limescale.

For more stubborn dirt, it is recommended to immerse the hand shower in a 10% citric acid solution with water for about 10 minutes to soften the limescale and then wipe across the nozzles with a soft brush. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product. From time to time, it is recommended to unscrew the hand shower and flush it from the inside to remove any dirt preventing the flow of water.

