


PARMA | bath mixer for exposed installation

Finish: brushed graphite (GR)

The OMNIRES PARMA collection stands out with its minimalist, elegant design. A well-balanced form with rounded edges proves light and subtle. Well thought-out solutions give the collection a timeless character.

Made of high grade brass, the mixer is equipped with a superior quality ceramic cartridge.

Graphite is an intriguing finishing in the shade of metallic grey, with a satin, brushed surface.

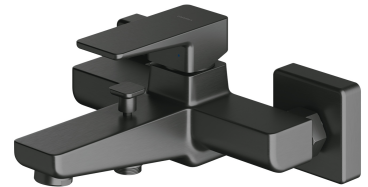

Design: Janusz Langner, OMNIRES

Certificates: Polish Declaration of Performance (B marking), Polish Hygienic Certificate PZH

Technologies



The mixer is equipped with the highest quality ceramic cartridge which ensures smooth and precise water flow control whilst guaranteeing long term product performance.



The mixer's body is made of high quality A-grade brass.

Flow characteristics

- water flow at 3 bar: 20 l/min
- hot water supply: max. 90 °C
- acoustic group: II/II

Specification

- spout reach: 18.8 cm

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with

a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

WHAT IS THE BEST METHOD FOR CLEANING THE AERATOR?

Remember to regularly control the flow of water through the aerator so as to ensure its problem-free operation and protect it from damage. In the case of small contaminants in the water or “hard” water, remove the aerator once every few weeks and clean it with a brush. In the case of more stubborn dirt, we recommend soaking the aerator for 10 minutes in a 10% citric acid solution with water.

