

X3 | kitchen tap with pull-out spout

Finish: polished chrome (CR)

The OMNIRES X3 kitchen tap's slender design with subtle detailing combines reliability and power. The above-average height of 45 cm makes the mixer's use more comfortable, while the detachable swivel spout allows for flexibility of reach. The two-function sprayer offers a variable water stream at the push of a button. Made of high grade brass, the mixer is equipped with a superior quality ceramic cartridge. Innovative technological solutions reduce water consumption by 50% while offering comfort and ease of use.

Chrome is a versatile finishing in a silvery colour, with the perfectly even and lustrous surface.

Certificates: Polish Declaration of Performance (B marking), Polish Hygienic Certificate PZH



Technologies



The mixer is equipped with the highest quality ceramic cartridge which ensures smooth and precise water flow control whilst guaranteeing long term product performance.



The ECO WATER technology minimizes environmental footprint by reducing the water consumption by approx. 50%, without compromising on the overall product experience.



Thanks to the AIR WATER technology, the water is soft and pleasant to the touch. The stream does not spray and it is quiet and consistent, even if any variations in water pressure occur.



The swivel pull-out spout allows precise control of the water flow, makes filling pots and containers easier, and ensures complete freedom of movement at the sink.



The product's coating, made using advanced galvanization technology, is durable and easy to clean.



The mixer's body is made of high quality A-grade brass.

Flow characteristics

- water flow at 3 bar: 8.39 l/min
- hot water supply: max. 90 °C
- working pressure 1-5 bar
- acoustic group: I/I

Specification

- detachable spout
- swivel spout
- spout reach: 22 cm
- water outflow height: 16.3 cm
- total mixer height: 49.3 cm
- 2-function hand shower

Product care

How to take care of bathroom and kitchen fittings?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition, then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

What is the best method for cleaning the aerator?

Remember to regularly control the flow of water through the aerator so as to ensure its problem-free operation and protect it from damage. In the case of small contaminants in the water or "hard" water, remove the aerator once every few weeks and clean it with a brush. In the case of more stubborn dirt, we recommend soaking the aerator for 10 minutes in a 10% citric acid solution with water.

