

FRESH | shower system for concealed installation

Finish: polished chrome (CR)

The OMNIRES FRESH collection constitutes the essence of minimalism. The design, inspired primarily by architecture, is based on structures with distinctive contours. The collection marvels with precisely defined edges, responsible for its unique, distinctive look.

Made of high grade brass, the mixer is equipped with a superior quality ceramic cartridge. Innovative technological solutions reduce water consumption by 50% while offering comfort and ease of use.

Chrome is a versatile finishing in a silvery colour, with the perfectly even and lustrous surface.

Design: Martin Yong



Technologies



Thanks to the AIR WATER technology, the water is soft and pleasant to the touch, enhancing the overall showering experience.



The EASY CLEAN nozzles allow the user to easily remove any limescale from the shower head, the hand shower and the body jet by simply wiping their silicone surface.



The product's coating, made using advanced galvanization technology, is durable and easy to clean.



The shower head is made using the ANTI-SCALE technology. It incorporates a silicone insert that prevents internal water stagnation. Occasional tilting of the shower head, so that any stagnant water could flow out through the nozzles, guarantees long term product performance.



The FLEXI JET system allows the user to precisely adjust the direction of the jet's water flow.

Flow characteristics

- hot water supply: max. 90 °C
- working pressure 1-5 bar

Specification

- exposed element for thermostatic 3-way shower/bath mixer for concealed installation (FR7138ROCR)
- built-in part for thermostatic 3-way shower/bath mixer (BOXTE3F)
- shower head (WGR225CR), streams: rain, aerated rain, dimensions: 25 x 25 cm
- brass shower arm (RA12CR)
- sliding shower set (JIMJIM-SCR), with 3-function hand shower
- brass shower elbow (8870CR)
- 4 brass body jets (J09CR)

Product care

How to take care of bathroom and kitchen fittings?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition, then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

How to take care of a shower head?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. Avoid using harsh cleaning agents that may damage the nozzles and the surface of the shower head.

The shower head should be angled after each use to allow the remaining water to flow out. This is the easiest yet necessary way to reduce the build-up of limescale from the water inside the shower head. Tilting the shower head additionally reduces the risk of the product becoming prone to leaking, allowing the product to serve its purpose reliably for an extended time.

What is the best way to care for a hand shower ?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. A toothpick or toothbrush can also be used to clean the spaces in between if there is a considerable build-up of limescale.

For more stubborn dirt, it is recommended to immerse the hand shower in a 10% citric acid solution with water for about 10 minutes to soften the limescale and then wipe across the nozzles with a soft brush. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product. From time to time, it is recommended to unscrew the hand shower and flush it from the inside to remove any dirt preventing the flow of water.

