Product code: SYSSL11CR
EAN: 5902539854251

OMNIRES

SLIDE | thermostatic shower system for concealed installation

Finish: polished chrome (CR)

The OMNIRES SLIDE collection stands out with its avant-guard form. Soft lines become subject to geometrical discipline. Surfaces bend at the play of light, adding a unique touch to the entire collection.

Made of high grade brass, the mixer is equipped with a superior quality ceramic cartridge. Innovative technological solutions reduce water consumption by 50% while offering comfort and ease of use.

Chrome is a versatile finishing in a silvery colour, with the perfectly even and lustrous surface.





Design: Dominika Drezner-Ilczuk
Distinctions: Dobry Wzór

Technologies

The mixer is equipped with the highest quality thermostatic cartridge incorporating a 38°C lock. The cartridge protects against sudden temperature changes and guarantees long term product performance.

The shower head is made using the ANTI-SCALE technology. It incorporates a silicone insert that prevents internal water stagnation. Occasional tilting of the shower head, so that any stagnant water could flow out through the nozzles, guarantees long term product performance.

The product's coating, made using advanced galvanization technology, is durable and easy to clean.

Thanks to the AIR WATER technology, the water is soft and pleasant to the touch, enhancing the overall showring experience.

The EASY CLEAN nozzles allow the user to easily remove any limescale from the shower head and the hand shower by simply wiping their silicone surface.

The mixer's body is made of high quality A-grade brass.

Flow characteristics

- water flow at 3 bar: 10 l/min
- hot water supply: max. 90 °C

Specification

- thermostatic shower/bath mixer for concealed installation
- stainless steel shower head (WGU225CR), dimensions: 25 x 25 cm
- brass shower arm (RA15CR)
- hand shower (DAVIS-RCRB), 3-function, streams: rain, massage, mixed
- stainless steel flexible shower hose (023-XCR), length: 150 cm
- brass shower elbow with a hand shower bracket (8815CR)

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

HOW TO KEEP THERMOSTATIC MIXERS IN OPTIMAL CONDITION?

For the thermostatic mixer to operate correctly, run the mixer once every two weeks, spanning the full temperature range – from very cold water to the maximum hot water setting. Repeat the operation several times.

HOW TO TAKE CARE OF A SHOWER HEAD?

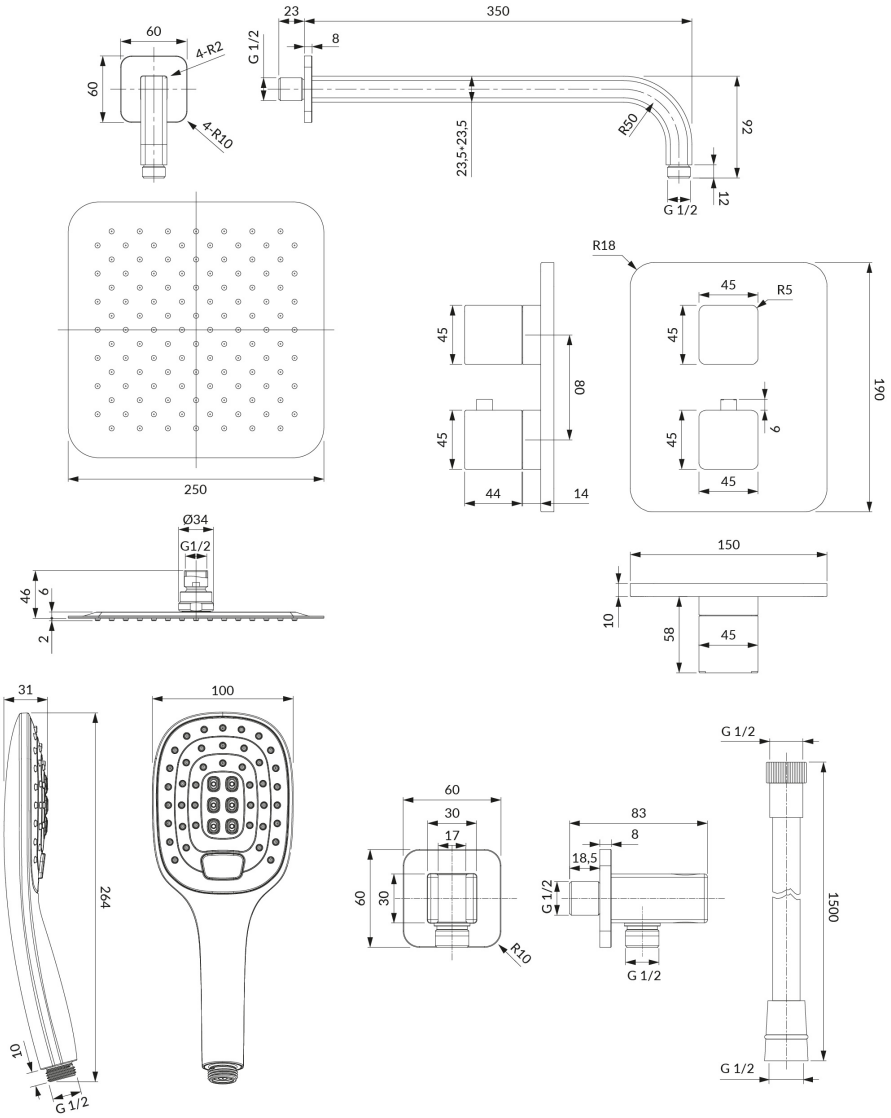
Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. Avoid using harsh cleaning agents that may damage the nozzles and the surface of the shower head.

The shower head should be angled after each use to allow the remaining water to flow out. This is the easiest yet necessary way to reduce the build-up of limescale from the water inside the shower head. Tilting the shower head additionally reduces the risk of the product becoming prone to leaking, allowing the product to serve its purpose reliably for an extended time.

WHAT IS THE BEST WAY TO CARE FOR A HAND SHOWER ?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. A toothpick or toothbrush can also be used to clean the spaces in between if there is a considerable build-up of limescale.

For more stubborn dirt, it is recommended to immerse the hand shower in a 10% citric acid solution with water for about 10 minutes to soften the limescale and then wipe across the nozzles with a soft brush. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product. From time to time, it is recommended to unscrew the hand shower and flush it from the inside to remove any dirt preventing the flow of water.


60
4-R2
60
4-R10
23
350
G 1/2
8
23,5
23,5
R50
92
12
G 1/2
250
R18
45
R5
45
45
80
45
9
45
44
14
190
Ø34
G1/2
46
6
2
150
10
58
45
31
100
264
10
G 1/2
60
30
17
60
30
R10
83
8
18,5
G 1/2
G 1/2
1500
G 1/2