Product code: Y1234GL
EAN: 5902539877878

OMNIRES

Y | thermostatic bath system for exposed installation

Finish: polished gold (GL)



The OMNIRES Y collection thrills with its simple line and an impeccable form which expresses the passion in pursuit for the ideal. The design has been inspired by and based on the shape of a circle. Its timeless and perfectly refined design, created in the spirit of minimalism, offers the maximum of interior design options.

The bath system combines the functionality of a bath mixer and a shower system, featuring a shower head, a 5-function hand shower and an integrated, foldable spout. This versatile solution lets you choose freely between bath and shower. An intuitive control makes it easy to switch the water flow between the shower head, hand shower and spout. When folded away, the spout takes up less space, enhancing the comfort of using the shower.

High-grade brass and a high-quality thermostatic cartridge ensure durability and reliable performance for years to come. An integrated cooling system prevents the mixer body from overheating, lowering the risk of burns on accidental contact and making everyday use safer.

Gold is a noble finishing in an elegant, light shade and a perfectly smooth and shiny surface. The product is coated using the advanced PVD technology.

Design: Janusz Langner, OMNIRES

Certificates: Polish Declaration of Performance (B marking)

Technologies

The mixer is equipped with the highest quality thermostatic cartridge incorporating a 38°C lock. The cartridge protects against sudden temperature changes and guarantees long term product performance.

Thanks to the AIR WATER technology, the water is soft and pleasant to the touch, enhancing the overall showring experience.

The EASY CLEAN nozzles allow the user to easily remove any limescale from the shower head and the hand shower by simply wiping their silicone surface.

The product is coated using the advanced PVD technology which guarantees the highest possible durability and facilitates cleaning.

Thanks to the SAFE TOUCH technology the mixer's body doesn't get hot, eliminating the risk of accidental scalding.

The shower head is made using the ANTI-SCALE technology. It incorporates a silicone insert that prevents internal water stagnation. Occasional tilting of the shower head, so that any stagnant water could flow out through the nozzles, guarantees long term product performance.

The convenient EASY SWITCH system allows the user to easily switch water receivers through rotating the spout left or right.

The mixer's body is made of high quality A-grade brass.

Flow characteristics

- water flow at 3 bar: 18 l/min
- hot water supply: max. 90 °C
- working pressure 1-5 bar
- acoustic group: II/I/II

Specification

- thermostatic bath mixer
- hot water lock at 38°C
- brass shower head, dimensions: ø25cm, reach from the wall: 42 cm
- foldable spout reach: 20.6 cm
- brass hand shower, 1-function (MICROPHONEX-RGL)
- stainless steel flexible shower hose, length: 150 cm
- diverter from shower head to hand shower/spout in the form of a knob
- adjustable height, minimum/maximum system height: 113.5 cm/152 cm

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

WHAT IS THE BEST METHOD FOR CLEANING THE AERATOR?

Remember to regularly control the flow of water through the aerator so as to ensure its problem-free operation and protect it from damage. In the case of small contaminants in the water or “hard” water, remove the aerator once every few weeks and clean it with a brush. In the case of more stubborn dirt, we recommend soaking the aerator for 10 minutes in a 10% citric acid solution with water.

HOW TO KEEP THERMOSTATIC MIXERS IN OPTIMAL CONDITION?

For the thermostatic mixer to operate correctly, run the mixer once every two weeks, spanning the full temperature range – from very cold water to the maximum hot water setting. Repeat the operation several times.

HOW TO TAKE CARE OF A SHOWER HEAD?

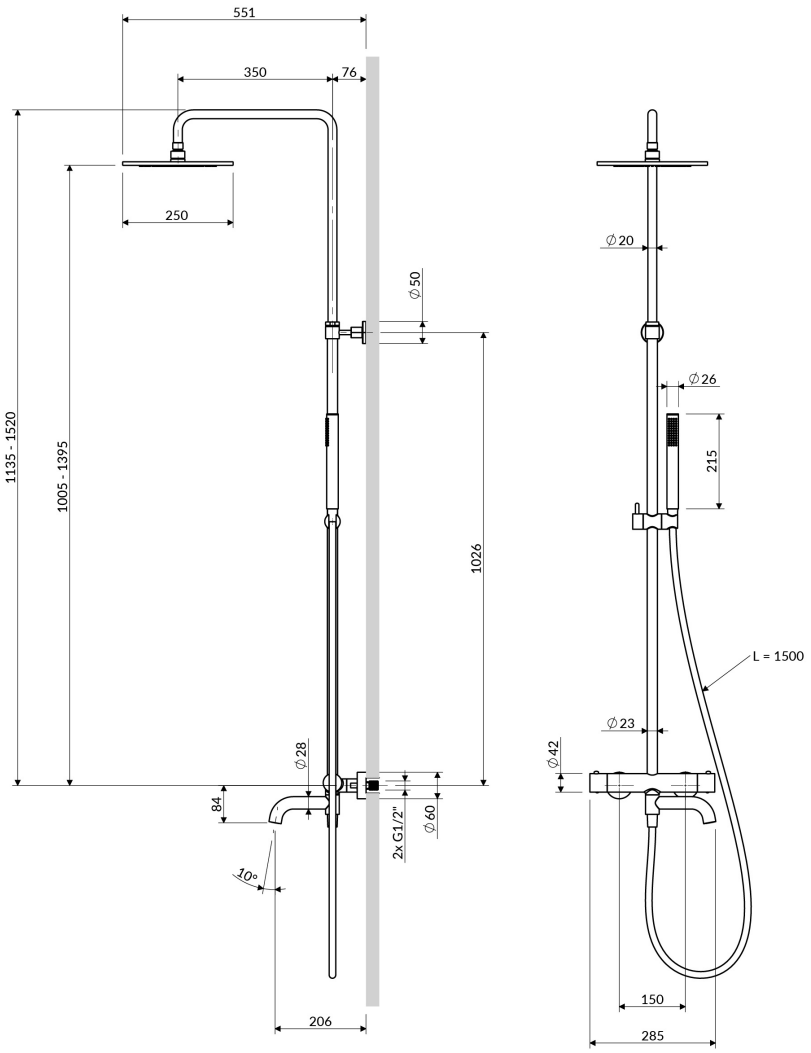
Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. Avoid using harsh cleaning agents that may damage the nozzles and the surface of the shower head.

The shower head should be angled after each use to allow the remaining water to flow out. This is the easiest yet necessary way to reduce the build-up of limescale from the water inside the shower head. Tilting the shower head additionally reduces the risk of the product becoming prone to leaking, allowing the product to serve its purpose reliably for an extended time.

WHAT IS THE BEST WAY TO CARE FOR A HAND SHOWER ?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. A toothpick or toothbrush can also be used to clean the spaces in between if there is a considerable build-up of limescale.

For more stubborn dirt, it is recommended to immerse the hand shower in a 10% citric acid solution with water for about 10 minutes to soften the limescale and then wipe across the nozzles with a soft brush. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product. From time to time, it is recommended to unscrew the hand shower and flush it from the inside to remove any dirt preventing the flow of water.


551
350
76
250
∅50
1135 - 1520
1005 - 1395
1026
∅28
84
10°
2x G1/2"
∅60
206
∅20
∅26
215
L = 1500
∅23
∅42
150
285