Product code: Y1244LUXLGL
EAN: 5902539833140

OMNIRES

Y | thermostatic shower system for exposed installation

Finish: polished gold (GL)



The OMNIRES Y collection thrills with its simple line and an impeccable form which expresses the passion in pursuit for the ideal. The design has been inspired by and based on the shape of a circle. Its timeless and perfectly refined design, created in the spirit of minimalism, offers the maximum of interior design options.

Gold is a noble finishing in an elegant, light shade and a perfectly smooth and shiny surface. The product is coated using the advanced PVD technology.

Design: Janusz Langner, OMNIRES

Certificates: Polish Declaration of Performance (B marking)

Technologies

The mixer is equipped with the highest quality thermostatic cartridge incorporating a 38°C lock. The cartridge protects against sudden temperature changes and guarantees long term product performance.

The shower head is made using the ANTI-SCALE technology. It incorporates a silicone insert that prevents internal water stagnation. Occasional tilting of the shower head, so that any stagnant water could flow out through the nozzles, guarantees long term product performance.

The product is coated using the advanced PVD technology which guarantees the highest possible durability and facilitates cleaning.

Thanks to the SAFE TOUCH technology the mixer's body doesn't get hot, eliminating the risk of accidental scalding.

The EASY CLEAN nozzles allow the user to easily remove any limescale from the shower head and the hand shower by simply wiping their silicone surface.

The mixer's body is made of high quality A-grade brass.

Flow characteristics

- hot water supply: max. 90 °C
- working pressure 1-5 bar
- acoustic group: II/I

Specification

- thermostatic shower mixer
- hot water lock at 38°C
- brass shower head, dimensions: ø25 cm, reach from the wall: 43 cm
- hand shower (YOSEMITE-RGL), 5-function, streams: massage, mist, aerated rain, aerated massage, aerated mist
- stainless steel flexible shower hose (023-XGL), length: 150 cm
- shower head/hand shower stream switch embedded in the water knob
- adjustable height, minimum/maximum system height: 96 cm/150 cm

Product care

HOW TO TAKE CARE OF BATHROOM AND KITCHEN FITTINGS?

You should clean your bathroom and kitchen fittings regularly, preferably after each use, so as to prevent the build-up of hard-to-remove dirt. For daily maintenance of external surfaces, use a soft cloth (for example, a microfibre cloth) and a solution of water with a mild cleaning agent with a natural composition. Hard-to-reach recesses and milled details can be gently cleaned with a soft brush. Then rinse the product thoroughly with clean water and wipe it dry. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product.

For more stubborn dirt, use a 10% citric acid solution with water. Apply this solution directly to the product or cover the product with a cloth soaked in the solution. After 10 minutes, rinse the product thoroughly with clean water and wipe it dry. If necessary, the process can be repeated.

HOW TO KEEP THERMOSTATIC MIXERS IN OPTIMAL CONDITION?

For the thermostatic mixer to operate correctly, run the mixer once every two weeks, spanning the full temperature range – from very cold water to the maximum hot water setting. Repeat the operation several times.

HOW TO TAKE CARE OF A SHOWER HEAD?

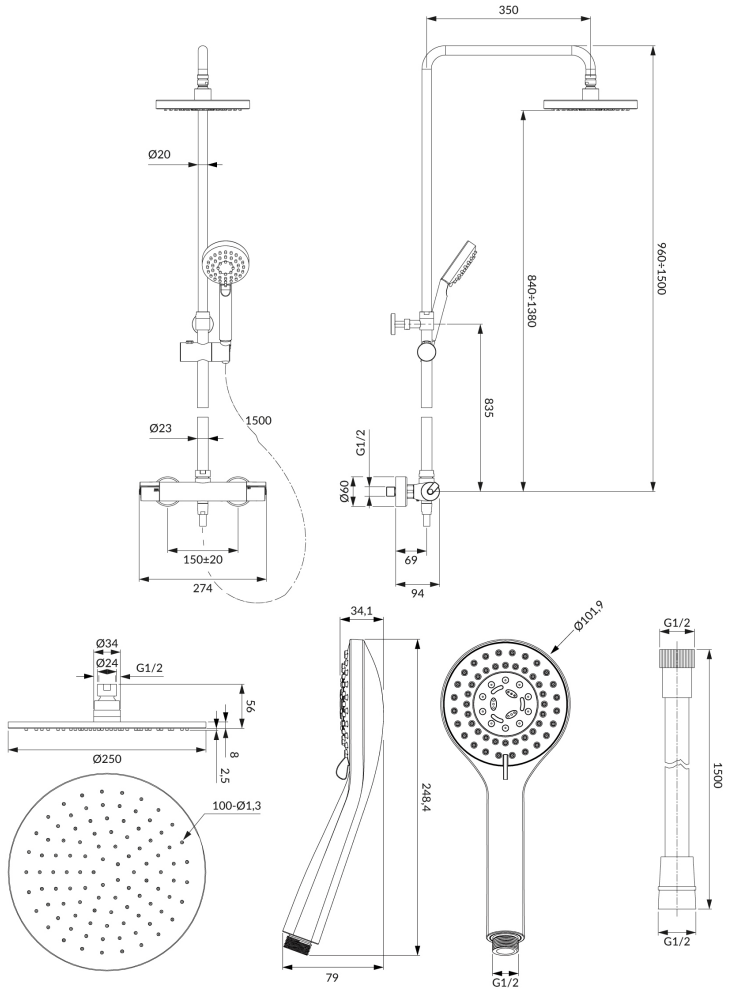
Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. Avoid using harsh cleaning agents that may damage the nozzles and the surface of the shower head.

The shower head should be angled after each use to allow the remaining water to flow out. This is the easiest yet necessary way to reduce the build-up of limescale from the water inside the shower head. Tilting the shower head additionally reduces the risk of the product becoming prone to leaking, allowing the product to serve its purpose reliably for an extended time.

WHAT IS THE BEST WAY TO CARE FOR A HAND SHOWER ?

Remember to regularly wipe the silicone nozzles with your hand to remove any limescale deposits that might be forming on their surface. A toothpick or toothbrush can also be used to clean the spaces in between if there is a considerable build-up of limescale.

For more stubborn dirt, it is recommended to immerse the hand shower in a 10% citric acid solution with water for about 10 minutes to soften the limescale and then wipe across the nozzles with a soft brush. It is not recommended to use rough or abrasive materials and corrosive or bleaching substances to prevent damaging the surface of the product. From time to time, it is recommended to unscrew the hand shower and flush it from the inside to remove any dirt preventing the flow of water.


350
Ø20
960-1500
840-1380
835
1500
Ø23
G1/2
Ø60
150±20
274
69
94
34,1
Ø101,9
G1/2
Ø34
Ø24
G1/2
56
8
2,5
Ø250
100-Ø1,3
248,4
1500
79
G1/2